

User manual

NAUCON-1000

User manual



Learn about the NAUCON-1000
with this complete User manual

NAUTRONIC
SCOREBOARD SYSTEM

Danmarksvej 1
DK-8660 Skanderborg
www.nautronic.com

Tel.: +45 8651 1166
scoreboards@nautronic.com

NAUCON-1000 USER MANUAL

SETTING UP THE NAUCON-1000

4	Getting to know your NAUCON-1000
5	Indicator icons
6	Start setting up your NAUCON-1000
6	General setup
8	Advanced setup
9	Service menu
14	Board zones setup

SETTING UP SPORT

18-19	Basketball
20-21	Handball
22	Volleyball
23	Ice hockey
24	Tennis
25	Floorball
26	Futsal
27	Bandy
28	Soccer
29	Mini hockey
30	Boxing
31	Water polo
32	American football
33	Basket 3X3
34	Netball
35	Inline hockey
36	Wrestling
37	Interval training
38	Squash/Badminton
38	Baseball


EXTRA SCOREBOARD FEATURES

- 40 Edit team lineups
- 41 Correct menu
- 42 Results showing on an A-H board
- 42 Side console setup
- 43 Total reset
- 44 How to check the software version
- 45 Updating the NAUCON-1000 software
- 47 Import/Export settings

TROUBLE SHOOTING

- 48 Trouble shooting
- 49 Diagnostics menu
- 50 Diagnostic troubleshooting guide

Getting to know your NAUCON-1000

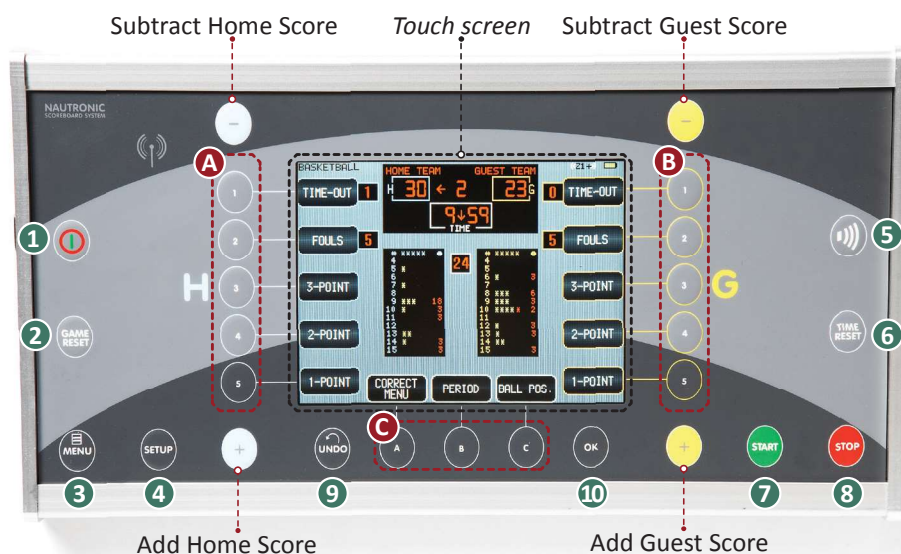

1 On/off

Turn the NAUCON-1000 on and off. When turning off the control panel you must confirm by pressing **ACCEPT** on the touch screen.

2 Game reset

Reset display, you must confirm by pressing **ACCEPT** on the touch screen.

3 Menu

A menu on the touch screen will show (Fig. 1, page 6).

4 Setup

A menu on the touch screen will show.

5 Manual horn

Press to blow the horn.

6 Time reset

Resets time and sets next period time. You must confirm by pressing **ACCEPT** on the touch screen.

7 Start

Game clock starts.

8 Stop

Game clock stops.

9 Undo

Undo the latest change.

10 OK

Confirm any changes made to the setup.

A B C

You can also use the click buttons referring to the buttons on the touch screen.

Wireless communication

H Home

G Guests

Indicator icons

THE INDICATOR ICONS will show in the top right corner of the touch screen.
Except in the setup menus.



Automatic horn on



Automatic horn off



Battery fully charged



Battery working



Battery charging



Battery low



Battery really low – **charge now!**



Battery critically low – **charge now!**



All zones active



Multiple zones active



All zones disabled



Zone 1-4




COLLISION – another NAUCON-1000 is transmitting in the same zone.

***Change or disable zones. See more on page 7.**

**Note you might see the flashing collision warning even when all zones are turned off.*

User manual

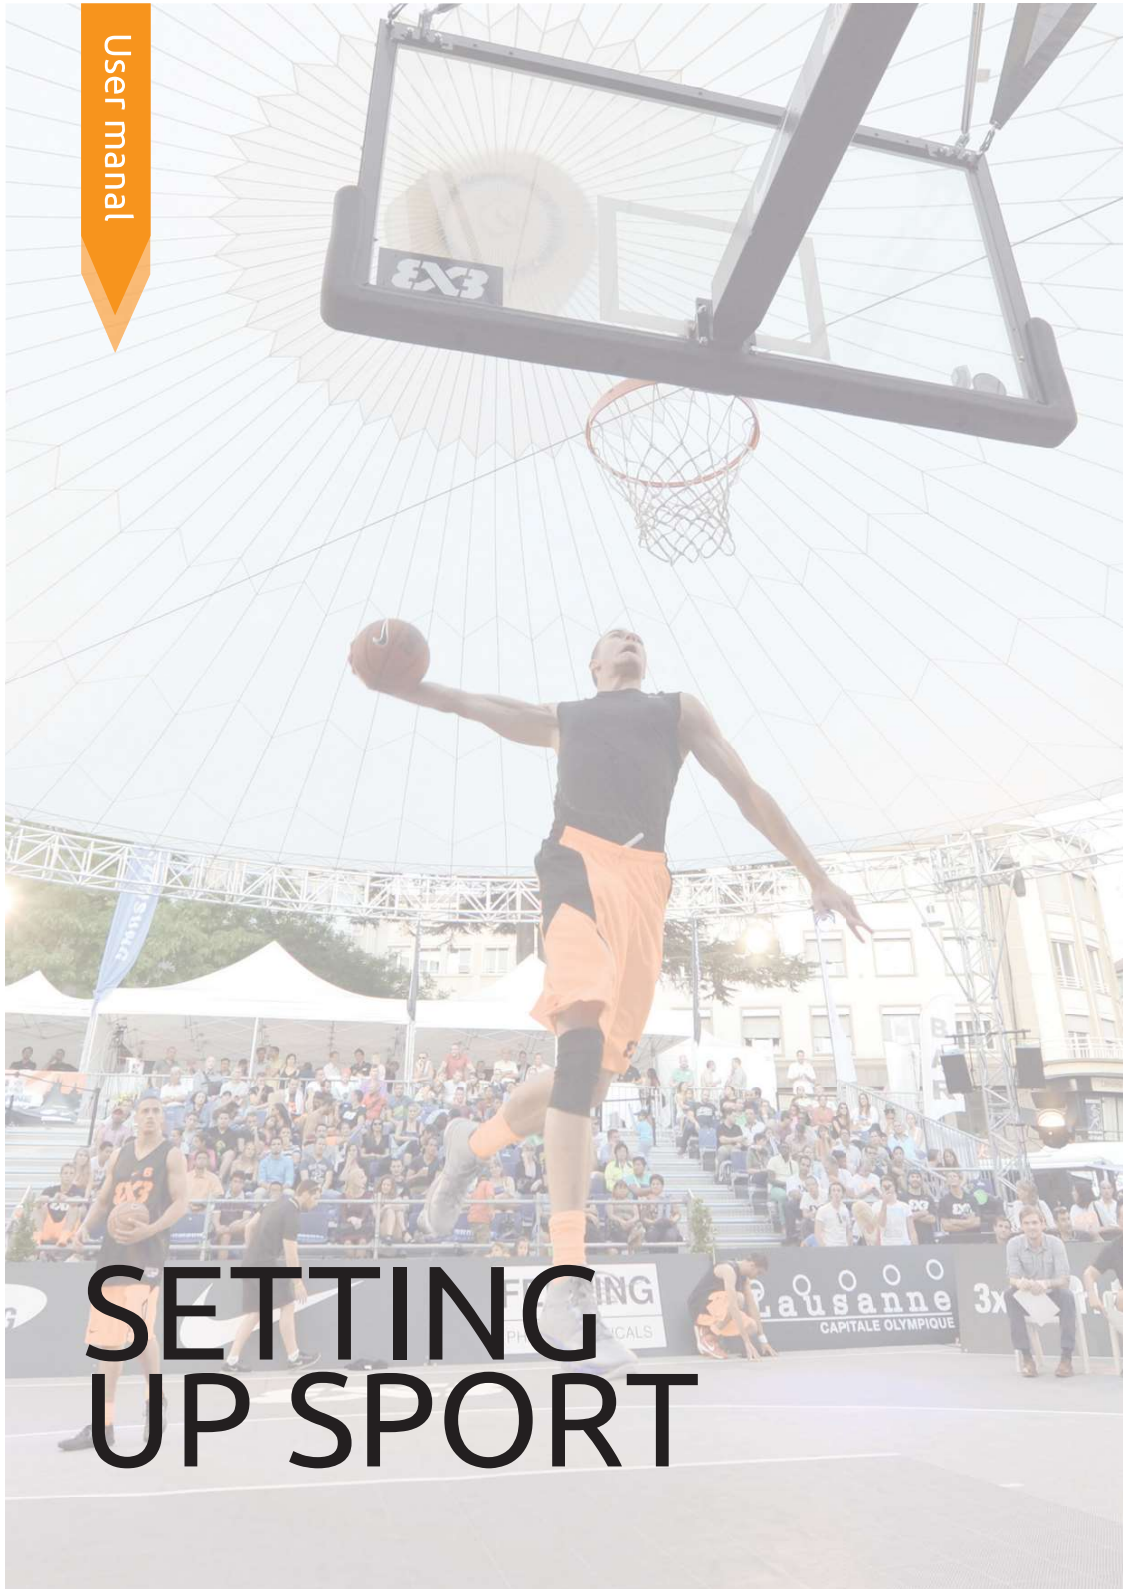

SETTING UP SPORT

Basketball setup

Choose BASKETBALL from the SELECT SPORT MENU. Then press the **SETUP** click button on the console and you will see a menu like shown below, *Fig. 14a*.

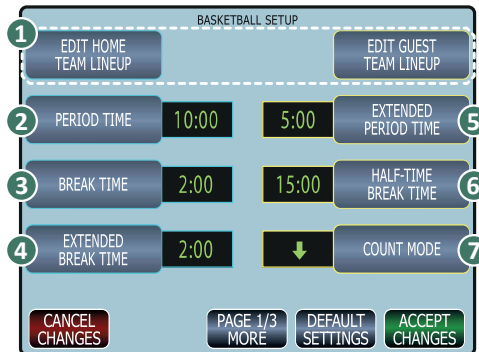


Fig. 14a – Setup basketball menu “Page 1/3”

Fig. 14a – “Page 1/3”:

- 1 Edit lineups**
Choose either to edit HOME or GUEST team lineup. You will enter a screen where you can change the name and number of the players, *see page 40*.
- 2 Period time**
Set the length of a period. Default: 10 min.
- 3 Break time**
Set the length of the breaks between periods. Default is 2 minutes.
- 4 Extended break time**
Set the length of an extended break. Default is 2 minutes.
- 5 Extended period time**
Set the length of an extended period. Default is 5 minutes.
- 6 Half-time break time**
Set the length of the half-time break. Default is 15 minutes.
- 7 Count mode**
You can change between whether the game clock is counting up or down by pressing **COUNT MODE**.

Default is DOWN.

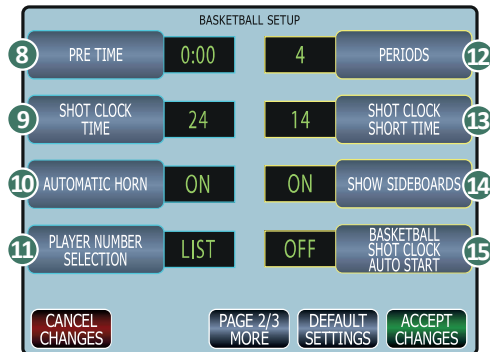


Fig. 14b – Setup basketball menu “Page 2/3”

Fig. 14b – “Page 2/3”:

- 8 Pre time**
Set the length of the pre time / the time counting down before the match. Default is 0 minutes
- 9 Shot clock time**
Set the count down of seconds for the shot clocks. Default is 24 seconds.
- 10 Automatic horn**
You can change between turning the automatic horn ON or OFF. Default is ON.
- 11 Player number selection**
You can change between whether the game clock is counting up or down by pressing **COUNT MODE**.

Default is DOWN.
- 12 Periods**
Set the number of periods. Default is 4.
- 13 Shot clock short time**
Set the count down of seconds for the shot clocks. Default is 14 seconds.
- 14 Show sideboards**
You can change between whether the game clock is counting up or down by pressing **COUNT MODE**.

Default is DOWN.
- 15 Basketball shot clock auto start**
Set the count down of seconds for the shot clocks. Default is 24 seconds.

Basketball setup

11 *Player number selection*

Choose whether scores and penalties are given to a specific player or to the whole team. Default is LIST.

LIST: Choose player number from a list.

TYPE: Type player number.

OFF: Scores and penalties are given to the whole team.

12 *Periods*

Sets the number of periods in the match. Default is 4.

13 *Shot clock short time*

Set the counting length of the shot clock's "Time 2". Default is 14 seconds.

14 *Show sideboards*

Turning the sideboards ON or OFF. Default is ON.

15 *Basketball shot clock auto start*

ON: Autostarts the shot clock when the game time is started

OFF: Shot clock time is started manually with a remote control.

Default is ON



Fig. 14c – Setup basketball menu “Page 3/3”

Fig. 14c – “Page 3/3”:

16 *Basketball shot clock auto stop*

ON: Stops the shot clock when the game time is stopped.

OFF: Shot clock time will continue running when the game time is stopped.

Default is ON

17 *Penalty show time*

Sets the time that a player number foul is shown on the scoreboard.

Default is 15 sec.